






- (Eng) Installation guide
- (D) Montageanleitung
- (F) Guide d'installation
- (E) Guía de instalación
- (NL) Installatiehandleiding
- (I) Guida all'installazione
- (P) Guia de instalação



N x E1 x.. series
N x E2 x..
N x E3 x..

EN15684: 2012
1 6 B 3 A F 3 2

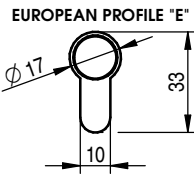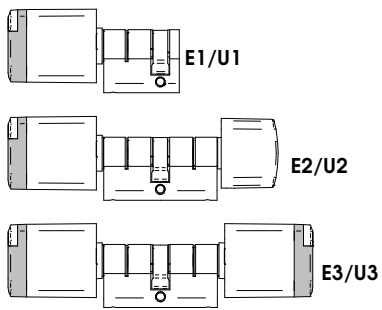

SALTO Recommended Batteries SP01926-5

Danger for electronic components due to electrostatic discharge.

SP225542



Not included/Nicht enthalten/Non inclus/No incluido
Niet inbegrepen/Non incluso/Não incluso



www.saltosystems.com/en/quick-links/manuals-and-guides/



SALTO Neo

© 2020 SALTO Systems S.L. 225790-ED.- 24/06/2020

All contents current at time of publication. SALTO Systems S.L. reserves the right to change availability of any item in this catalog, its design, construction, and/or materials.


E1 E2





(Eng) Installation (D) Montageanleitung (F) Installation (E) Instalación (NL) Montage (I) Montaggio (P) Instalação

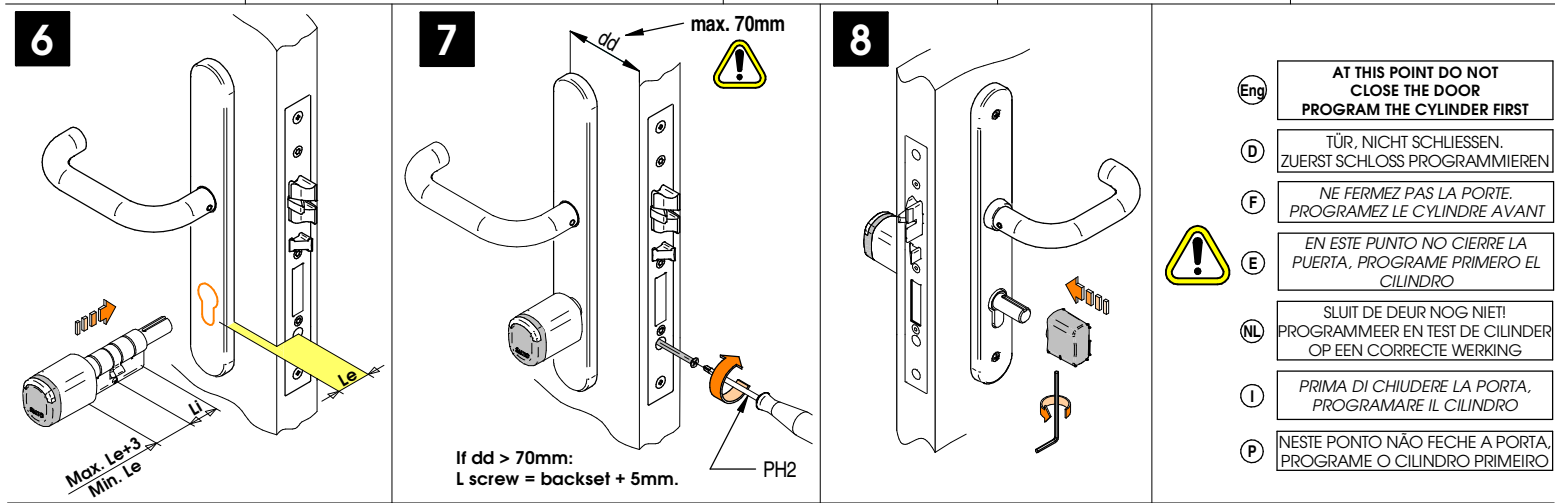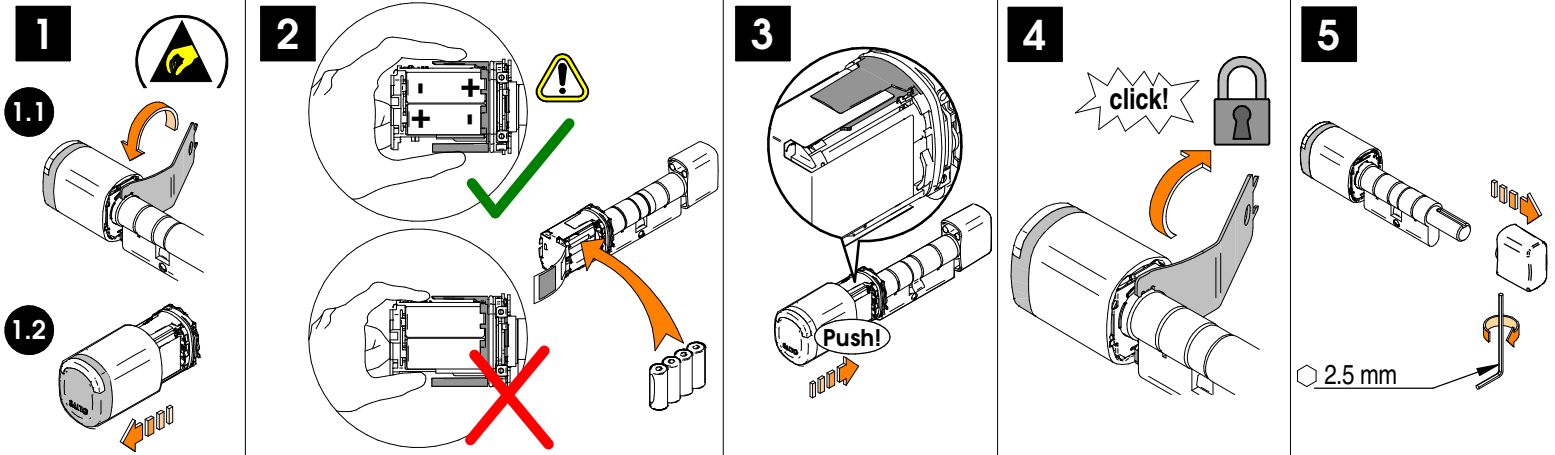

E3/U3

(Eng) Installation (D) Montageanleitung (F) Installation (E) Instalación (NL) Montage (I) Montaggio (P) Instalação








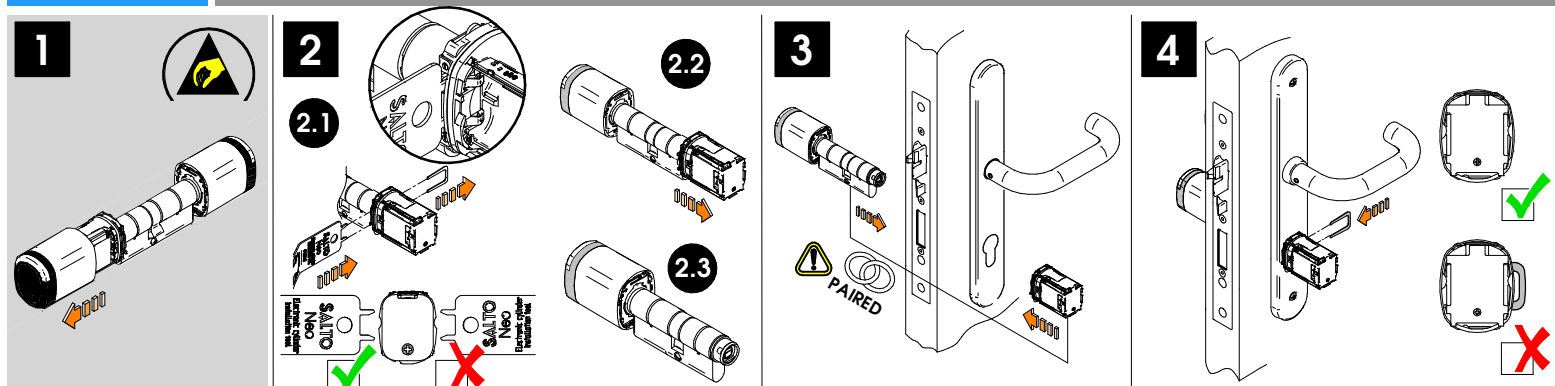


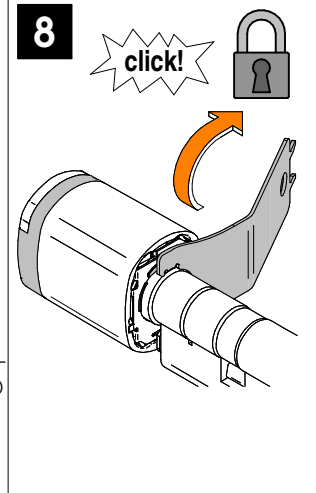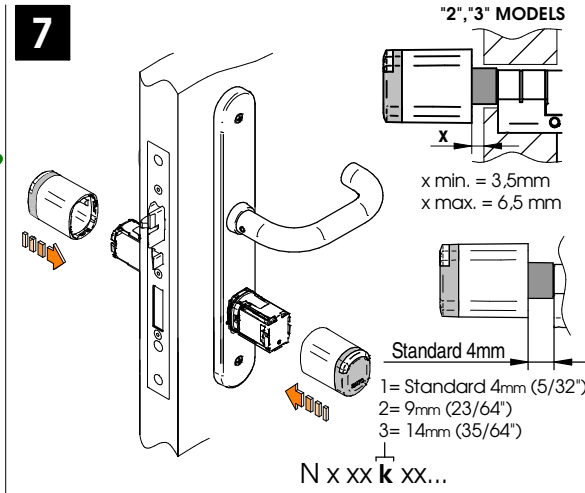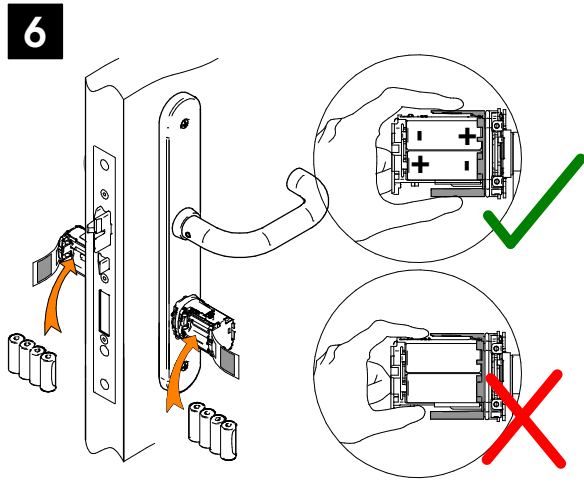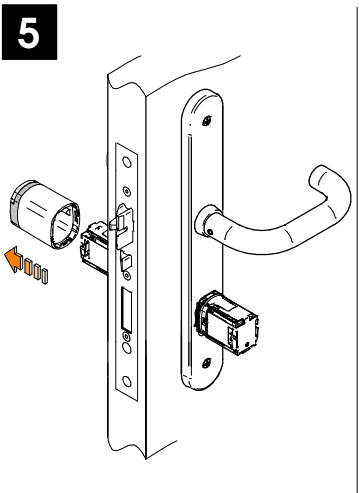

- ⚠ AT THIS POINT DO NOT CLOSE THE DOOR PROGRAM THE CYLINDER FIRST**
- (Eng) TÜR, NICHT SCHLIESSEN. ZUERST SCHLOSS PROGRAMMIEREN
 - (D) NE FERMEZ PAS LA PORTE. PROGRAMEZ LE CYLINDRE AVANT
 - (E) EN ESTE PUNTO NO CIERRE LA PUERTA, PROGRAME PRIMERO EL CILINDRO
 - (NL) SLUIT DE DEUR NOG NIET! PROGRAMEER EN TEST DE CILINDER OP EEN CORRECTE WERKIN
 - (I) PRIMA DI CHIUDERE LA PORTA, PROGRAMARE IL CILINDRO
 - (P) NESTE PONTO NÃO FECHER A PORTA, PROGRAME O CILINDRO PRIMEIRO

(Eng) Battery change (D) Batterie tauschen (F) Remplacer pile (E) Sustitución pilas (NL) Batterijwissel (I) Sostituzione pila (P) Sustituição da pilhas

DRY! TROCKEN!
DROG! SECO!
ASCIUTTO! SEC!

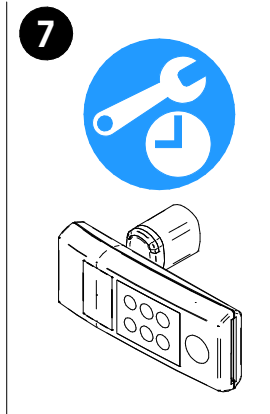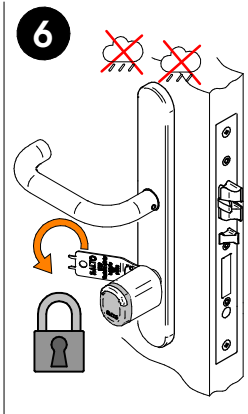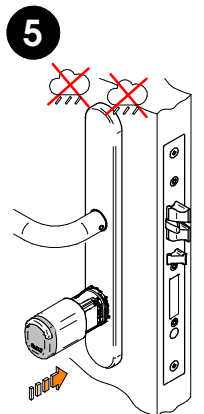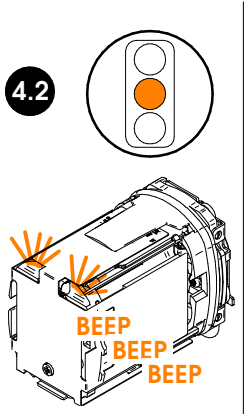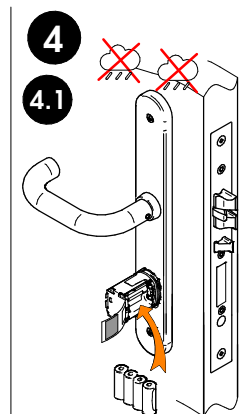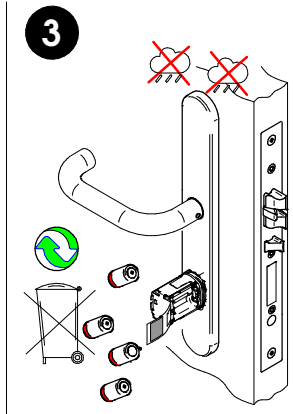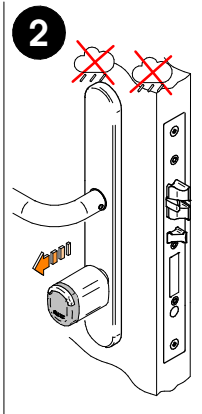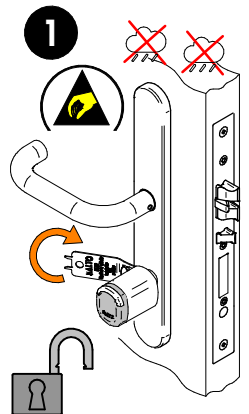







(Eng) Installation and use recommendations (D) Empfohlene Handhabung und Installation (F) Recommendations d'utilisation et d'installation (E) Consejos de uso e instalación (NL) Installatie - en gebruiksinstructies (I) Raccomandazioni d'uso ed d'utilizzo (P) Instruções de uso e instalação

(Eng) Outer knob
(D) Außenknopf
(F) Bouton extérieure
(E) Pomo exterior
(NL) Buitenknop
(I) Manopola esterna
(P) Botão exterior

0-3 mm max.

Door
Tür
Porte
Puerta
Deur
Porta
Porta

Burglar resistant door plate

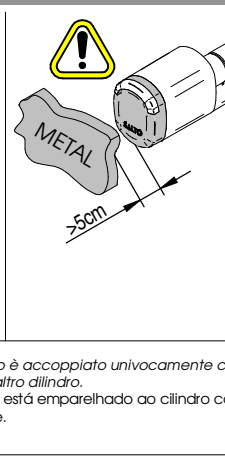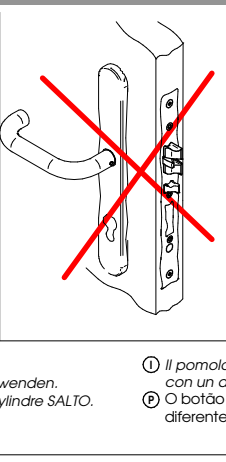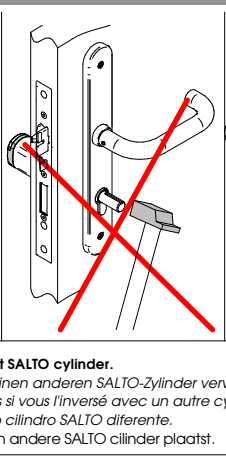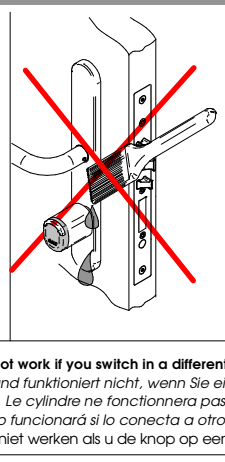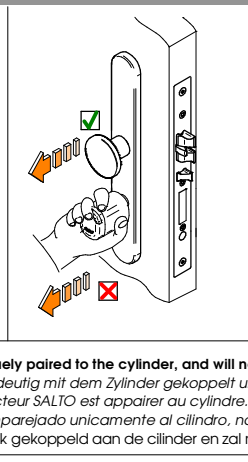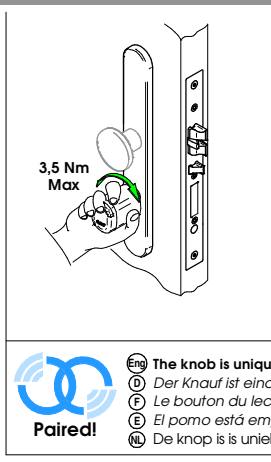

- (Eng) Do not place any movable metallic object closer than 5cm in front of the reader.**
- (D) Platzieren Sie keine beweglichen Metallteile näher als 5 cm vor dem Leser.
 - (F) Ne placez aucun objet métallique mobile à moins de 5 cm du lecteur.
 - (E) No colocar ningún objeto móvil metálico delante del lector a menos de 5cm de distancia.
 - (NL) Plaats geen enkel beweegbaar metaal voorwerp dichterb dan 5 cm voor de lezer.
 - (I) Non posizionare oggetti metallici mobili più vicini di 5 cm al lettore.
 - (P) Não coloque nenhum objeto metálico mais próximo do que 5cm na frente do leitor



- (Eng) The knob is uniquely paired to the cylinder, and will not work if you switch in a different SALTO cylinder.**
- (D) Der Knopf ist eindeutig mit dem Zylinder gekoppelt und funktioniert nicht, wenn Sie einen anderen SALTO-Zylinder verwenden.
 - (F) Le bouton du lecteur SALTO est appairé au cylindre. Le cylindre ne fonctionnera pas si vous l'inversez avec un autre cylindre SALTO.
 - (E) El pomo está emparejado únicamente al cilindro, no funcionará si lo conecta a otro cilindro SALTO diferente.
 - (NL) De knop is is uniek gekoppeld aan de cilinder en zal niet werken als u de knop op een andere SALTO cilinder plaatst.

- (I) Il pomolo è accoppiato univocamente con il corpo del cilindro, non funzionerà il dispositivo se si cambia con un altro cilindro.
- (P) O botão está emparelhado ao cilindro correspondente e não funcionará se trocar por um cilindro SALTO diferente.